 
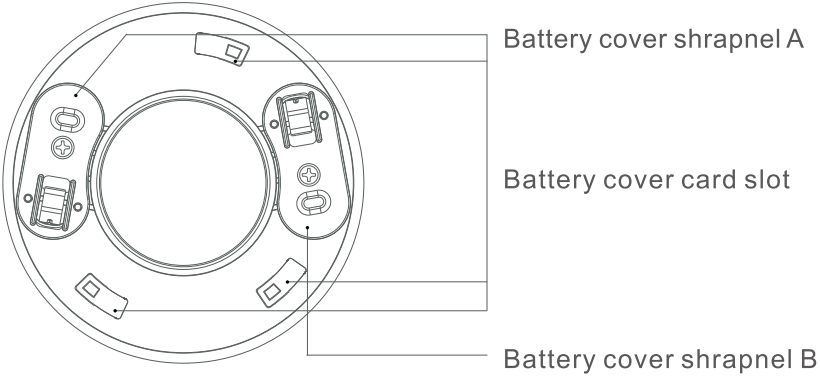 
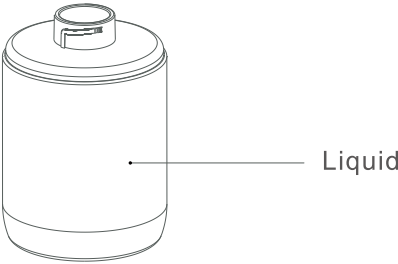 
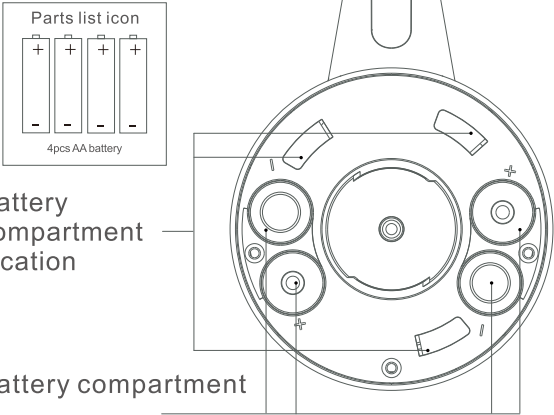 


Automatic Soap Dispenser

Please read this manual carefully before using the product and keep it properly.


Product description

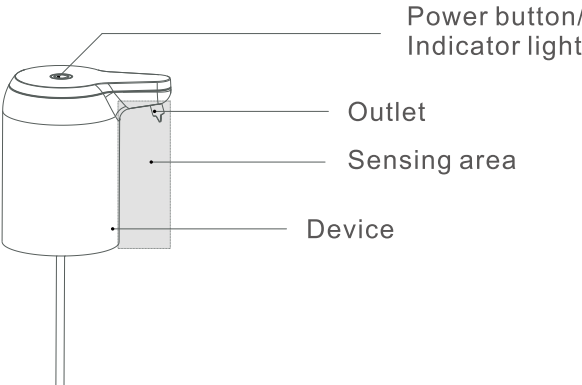


Features ①② Refer to page 4 for instructions




Durable

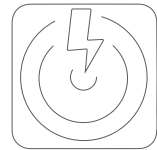


Induction of liquid
in 0.25 seconds[Ⓞ]

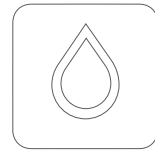

Prevent splashing

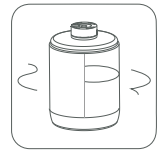

Easy liquid
replacement

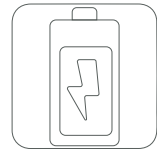

Battery can be used
for 9 months[Ⓞ]

2


Installation

①




Turn counter clockwise to
open the device

②

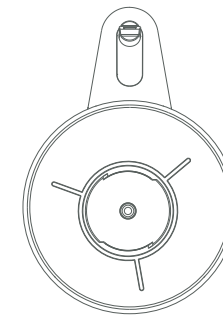


Turn counter clockwise to open
the battery cover

③

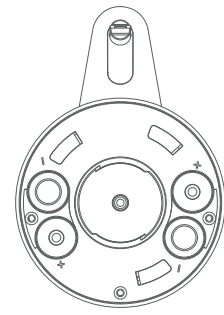


Follow the +/- marks to
load battery correctly

④

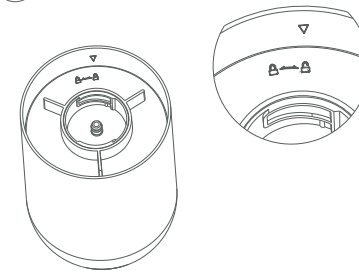


Follow the “L” direction to
lock the battery cover

⑤

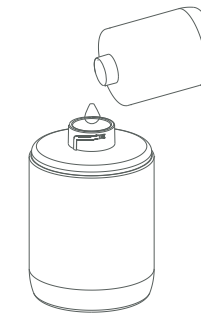

Pour the diluted liquid
into the bottle


⑥

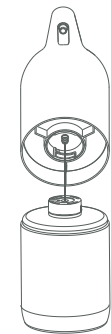

Turn counter clockwise to lock
the bottle to the device

3

Instructions

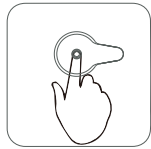

1. Touch the switch to turn on the automatic soap dispenser.



2. Reach out to the sensing area to get the liquid.

Tip: Automatic sensor soap dispenser automatically enters the standby state when it is not working.

(Description of characteristics of automatic sensor soap dispenser)

- ① : 1. Induction of liquid in 0.25 seconds.
- ② : 15 times a day, 24 hours standby calculation.

Status	Indicator display
Turn on	Blue light on for two seconds
Turn off*	Red light flashes twice slowly and goes out
Low batter	After induction, the red light flashes for three seconds

*In power-on state, short press to turn off.

Maintenance

1. If cleaning is required, gently wipe the surface with a wet towel when the machine is off.
2. If this product is left unused for a long time, please remove the dry battery to avoid battery moisture, leakage and other phenomena.

Precautions

1. Please do not immerse this product in water or rinse directly to avoid short circuit.
2. Do not tilt the bottle when installing or replacing liquid. If a small amount of liquid flows out, wipe it clean and use it normally.
3. Please do not use foam liquid for replacement, as it may cause machine failure.
4. Store this product in a cool place, and avoid direct sunlight or excessive temperature.

Troubleshooting table

Fault phenomenon	cause of issue	solution
Unable to turn off	The battery's positive and negative electrodes are wrong	Reinstall the battery
Light does not shine	The product is not turned on	Turn on correctly
	The product is not turned on	Turn on correctly
Unable to dispense	Liquid has run out	Change the liquid
	Battery exhausted	Change the battery
Red light flashes quickly	Black sensing area is blocked by liquid	Wipe the sensor after power off and then power on again

Parameter

Name Automatic Soap Dispenser

Material: ABS

Rated voltage: 6V

Type of battery: No. 5 alkaline battery

Working temperature: 5°C~40°C

Working humidity: 0%~85%RH

Automatic soap dispenser performance failure table

Name	Performance failure
Automatic soap dispenser	Unable to switch on and off the indicator light is off no liquid
Liquid	Leakage

Non-warranty regulations

- 1.Unauthorized maintenance, misuse, collision, negligence, abuse, liquid intake, accident, alteration, anti-counterfeiting mark;
- 2.Has expired three guarantees.
- 3.Damage due to force majeure.
- 4.Non-compliant list performance failure.
- 5.Product failure due to human causes.